

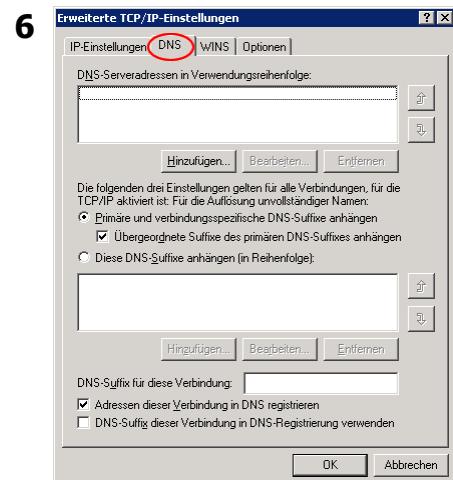
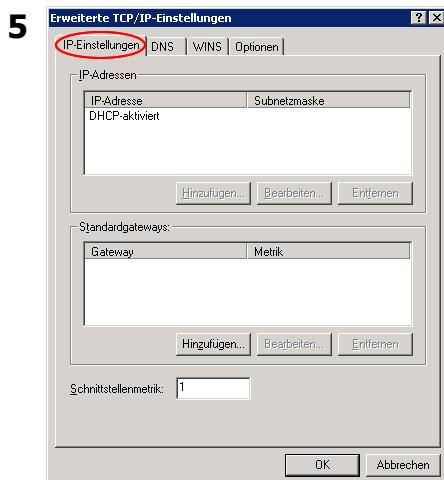
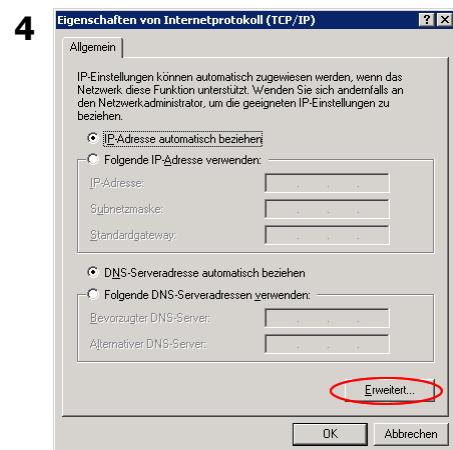
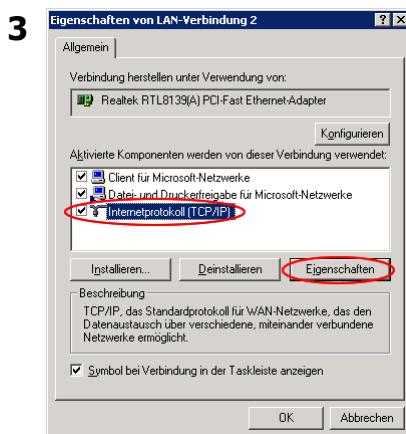
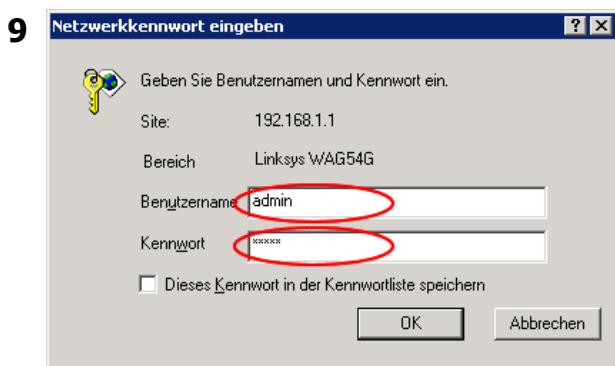


Wie konfiguriere ich einen ADSL-Anschluss?

(Beispiel: Router LINKSYS WAG54G-EU, Standardkonfiguration **ohne** Sicherheitseinstellungen)

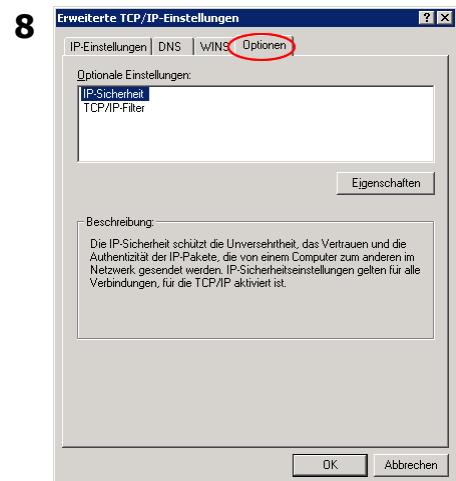

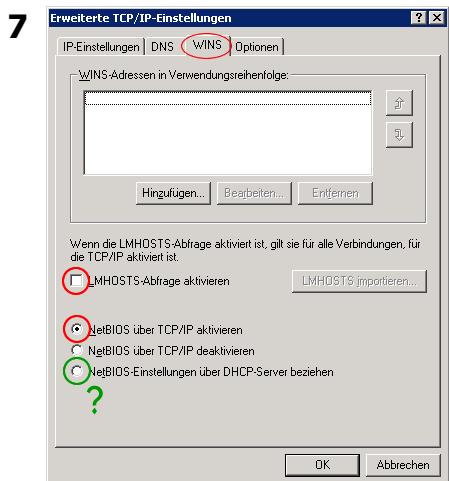

Setup

Setup **Wireless** **Security** **Access Restrictions** **Applications & Gaming** **Administration** **Status**

Basic Setup | DDNS | Advanced Routing

Internet Setup**ADSL Settings**

Encapsulation:

Virtual Circuit: VCI (Range 1~65535)

Multiplexing: LLC VC

PPPoE Settings

Service Name:

User Name:

Password:

Connection: Connect on Demand (Max Idle Min.)
 Keep Alive: Redial Period Sec.

**Optional Settings
(required by some ISPs)**

Host Name:

Domain Name:

MTU

MTU: Automatic Manual
 Size: Default: 1492

Network Setup**Router IP**

Local IP Address:
 Subnet Mask:

Network Address Server Settings (DHCP)

Local DHCP Server: Enabled Disabled
 Starting IP Address:
 Number of Addresses:
 DHCP Address Range: 192.168.1.100 to 192.168.1.149
 Client Lease Time: minutes (Range 1~10080)

Time Setting

Time Zone:

Save Settings | **Cancel Changes**

